

60 Gallon Deck Box


Model: DB23001



3-Y

Step 1:

Found the Unique Product ID on the product.

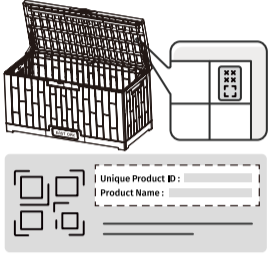

Step 2:

Scan the QR code within 90 days to access our registration page. Fill the Unique Product ID and other required information as instructed.



Questions? Comments? Reach out to us for expert support!

support@eastoak.com
eastoak.com
1-833-EAST-OAK (USA)
(1-833-327-8625) Mon-Fri 8am-8pm EST

Need help starting? Scan the QR code for installation video guidance.



Installation video

Welcome to the East Oak family!

Stay updated with our latest news and exclusive discounts by following us on social media!



Facebook @eastoakliving
Instagram @eastoak_official
Instagram @eastoakliving
YouTube @eastoakliving2080

PARTS

💡 Tips:

You can find the installation prompt letters (A-E) on the inside of all panels.




Side Panel
A x 2PCS



Base Panel
B x 1PC



Back Panel
C x 1PC

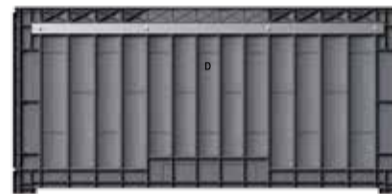

Front Panel
D x 1PC



Lid Panel
E x 1PC

Installation Diagrams

A x 2
B x 1

⚠️ MUST DO FIRST:

1. Install the two **Side Panels (A)** onto the **Base Panel (B)** first.
2. Ensure the lettered sides of both panels face inward.
3. Not following this order may make assembly difficult and could damage parts.


💡 Tips:

Refer to the letters A-E printed on the inside of each panel.



1 Install the Side Panels


1. Lay the **Base Panel (B)** flat.
2. Insert the two **Side Panels (A)** vertically into the slots on both ends of the base.

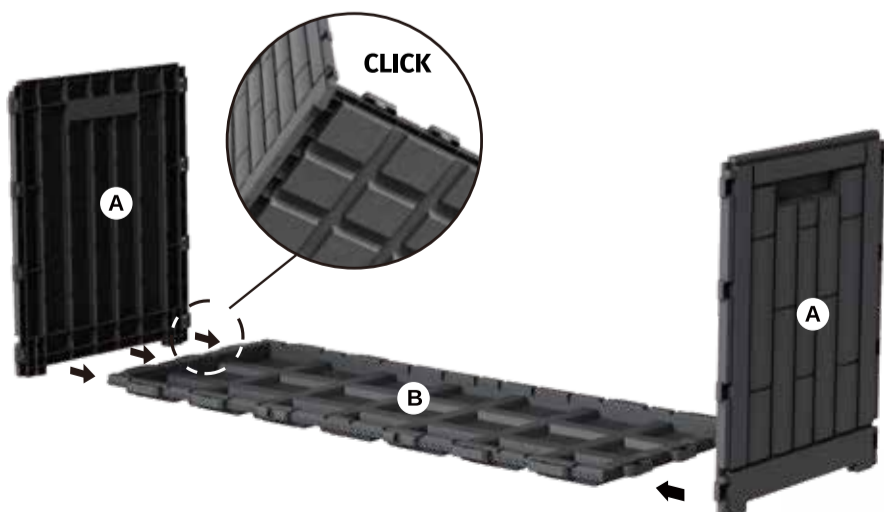

2 Install the Front Panel (D)


C x 1
D x 1

1. Lay the **Front Panel (D)** flat with the lettered side facing inward.
2. Flip the A + B assembly over and lower it onto (D).
3. Align the tabs with the slots and press along the edges until all snaps click into place. Use a rubber hammer if needed.
4. Two-person assembly recommended.

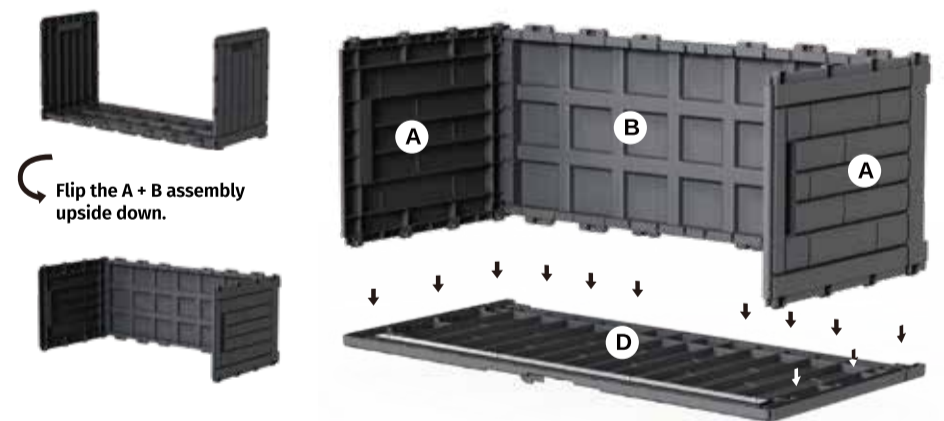

3 Install the Back Panel (C)

1. Ensure the lettered side of the Back Panel (C) faces inward.
2. Align the tabs on (C) with the slots on (A) and (B).
3. Press along the edges until all snaps click into place. Use a rubber hammer if needed.
4. **Ensure the latch opening on (C) is at the top and faces outward.**

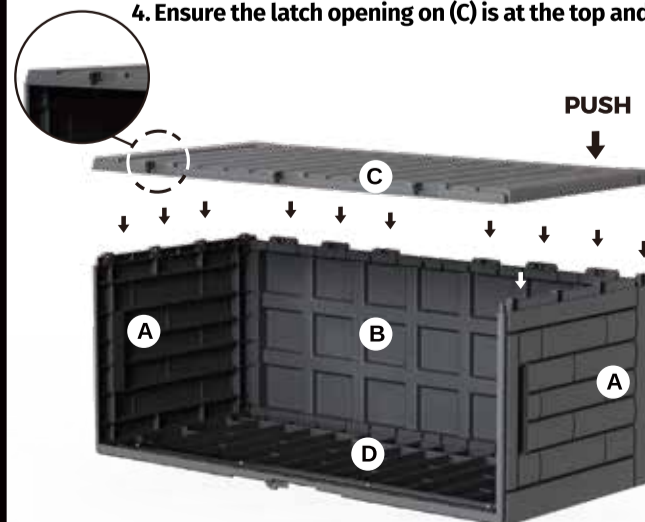

💡 Tips:

A strong force is required. we recommend using a rubber hammer to assist. Rubber hammer not included.



